 








 

 

 











 


 

 





 





 

 





 

 



 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Search		Red / Netflix / Search
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	O))/Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	Display		Display / Media
	Return		Back / Return
	Mode		Text / Goto





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Search		Red / Netflix / Search
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	O))/Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	Display		Display / Media
	Return		Back / Return
	Mode		Text / Goto





Originalfernbedienung **Ersatzfernbedienung**

	Setup		Setup / OPT /
	HDMI	+ +	Shift + 0
	Zoom		Zoom / Size

Originalfernbedienung **Ersatzfernbedienung**

