



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Preset/Folder Up		CH+ / Page+
	Vol+		Vol+
	Preset/Folder		CH- / Page-
	Function		Menu / Home
	Vol-		Vol-
	Sleep		Sleep / Timer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Tun-/l<<</<<		<< / Tune-
	Stop		Stop / Hold
	>>/>>I/Tuner+		>> / Tune+
	Repeat		Green / APP / Repeat
	Program/Memo		TV/Radio /
	RDS		AV / Input / RDS
	PTY		Picture / Format

**Originalfernbedienung    Ersatzfernbedienung**

	PTY Search		Red / Netflix / Search
	EQ		Subtitle / EQ
	XDSS Plus		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	MP3 Info		Info / Angle
	7		7
	8		8
	9		9
	0		0

