



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	>		>> / Preset+
	<		<< / Preset-
	>>		>> / Tune+
	<<		<< / Tune-
	Program		TV/Radio /

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	CD Direct 1		1
	CD Direct 2		2
	CD Direct 3		4
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>		>> / Preset+
	<		<< / Preset-


 
 
 


 




 

 

 



 
 




Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Program		TV/Radio /





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>		>> / Preset+
	<		<< / Preset-
	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

