



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Guide		Guide / EPG / -/--
	Input Tv		TV/Radio /
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	Text		Text / Goto
	STTL/AD		Subtitle / EQ
	Aspect		Picture / Format
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Home		Shift + Menu /
	APPS		Shift + Green / APP /
	Option		Setup / OPT /
	Return		Back / Return
	Up		Up
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Left		Left
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Fav / Marker / PC
	Hexa Boost		Sound / Title
	<</ <<		<< / Tune-
	Play		Play / Slow
	>>/>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Off Timer		Sleep / Timer
	My APP		Smart / List
	e-Help		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung


