 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V.Formal		Picture / Format
	Sleep		Sleep / Timer
	Tv/Rad		TV/Radio /
	Resolution		Setup / OPT /
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /
	Subtitle		Subtitle / EQ
	Teletext		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Eject/Play List		Eject / Surround
	Info		Info / Angle
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+



