



 

 

 

 

 

 

 

 

 

 





 

 















 
 






 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Theatre		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	ENT/MEM		Fav / Marker / PC
	A.F.D.		Audio / Lang I/II
	Movie		Subtitle / EQ
	Music		TV/Radio /
	Auto Cal		Text / Goto



 



 












 


 

 
 
 

 

 
 
 

Originalfernbedienung Ersatzfernbedienung

	Input Mode		AV / Input / RDS
	Sleep		Sleep / Timer
	Night Mode		Picture / Format
	Display		Display / Media
	AMP Menu		D.Menu / Top
	2CH/A.Direct		Zoom / Size
	Options/Tools		Setup / OPT /
	Return/Exit		Back / Return
	Up		Up
	Home/Menu		Menu / Home
	OK		OK
	Down		Down
	Right		Right
	Left		Left
	I<<		I<< / Preset-
	←		Red / Netflix / Search
	→		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop/D.Tuning		Stop / Hold
	Master Vol+		Vol+
	Master Vol-		Vol-
	Muting		Mute / Dimmer
	Preset+		Shift + >>I / Preset+
	Preset-		Shift + I<< / Preset-
	Video 1		Shift + 4
	Video 2		Shift + 5
	BD		Shift + 3
	SAT		Shift + 0
	DVD		Shift + 2
	SA-CD/CD		Shift + 8





 



 

 





 

 

 



 

 







Originalfernbedienung Ersatzfernbedienung

	TV		Shift + 1
	DMPort		Shift + 9
	Tuner		Shift + 6
	Tuning- Tuner		Shift + << /
	Tuning+ Tuner		Shift + >> /
	Stop Tuner		Shift + Stop /










 


 

 



 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	-/--		Guide / EPG / -/--
	ENT/MEM		Fav / Marker / PC
	Display		Display / Media
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Home/Menu		Menu / Home
	Return/Exit		Back / Return
	Options/Tools		Setup / OPT /
	I<<		I<< / Preset-
	←		Red / Netflix / Search
	→		Green / APP / Repeat
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Tv Vol+		Vol+
	Tv Vol-		Vol-
	Muting		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

	Tv CH+		CH+ / Page+
	Tv CH-		CH- / Page-
	Tv Input		AV / Input / RDS
	Wide		Picture / Format

Originalfernbedienung Ersatzfernbedienung

