








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	DTV/ATV		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide / EPG / -/--
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Aspect		Zoom / Size















 




**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	V+		Vol+
	V-		Vol-
	Mute		Mute / Dimmer
	MTS		Eject / Surround
	Timer		Sleep / Timer
	P+		CH+ / Page+
	P-		CH- / Page-
	Red		Red / Netflix / Search

 









**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	TTX		Text / Goto
	Subtitle		Subtitle / EQ
	DTV/Radio/Repeat		TV/Radio /
	List		Smart / List
	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Rec		Rec / Rec Mode

**Originalfernbedienung    Ersatzfernbedienung**

	Rec Menu		D.Menu / Top
	T-Shift		Setup / OPT /
	Still		Audio / Lang I/II

