



 

 
 
 
 
 
 
 


 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Info		Info / Angle
	Angle		Shift + Info / Angle
	Copy		Picture / Format
	Zoom		Zoom / Size
	Tv Sys		Smart / List
	Music		Sound / Title
	Setup		Setup / OPT /
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

 


 

 



 
 



 
 
 
 
 
 


Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Time Shift		Sleep / Timer
	0		0
	Goto		Shift + Text /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	>>/FF		>> / Tune+
	<</FR		<< / Tune-
	A-B		Shift + Yellow / YouTube /
	Repeat		Shift + Green / APP /
	>>I/Next		>>I / Preset+
	Vol+		Vol+
	Play/Pause		Play / Slow
	Vol-		Vol-





**Originalfernbedienung   Ersatzfernbedienung**

	I<</Prev		I<< / Preset-
	Home		D.Menu / Top
	Up		Up
	X/Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Select		Fav / Marker / PC
	Down		Down
	Confirm		Display / Media
	Red		Red / Netflix / Search
	Green/EPG		Guide / EPG / -/--
	Green/EPG		Green / APP / Repeat
	Yellow/TTX		Yellow / YouTube / Repeat
	Yellow/TTX		Text / Goto
	Blue		Blue / Prime Video / Random

**Originalfernbedienung   Ersatzfernbedienung**