
















 


Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Audio		Audio / Lang I/II
SUBT		Subtitle / EQ
Tv/Radio		TV/Radio /
TXT		Text / Goto
Menu		Menu / Home
Up		Up
i		Info / Angle
Left		Left
OK		OK
Right		Right
ESC		Exit / Cancel / Clear
Down		Down
↔		Back / Return
Vol+		Vol+
PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

Vol-		Vol-
PR-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/--
0		0
FAV		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat



Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Blue	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung
















Originalfernbedienung	Ersatzfernbedienung



Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Radio		TV/Radio /
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

TV/SAT		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC



	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Red				Red / Netflix / Search
Green				Green / APP / Repeat
Yellow				Yellow / YouTube / Repeat
Blue				Blue / Prime Video / Random
TV		 + 		Shift + 1
Video		 + 		Shift + 4
Epg		 + 		Shift + Guide / EPG / -/-

