

 













 

 



 


























 






















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	Display		Display / Media
	Audio		Audio / Lang I/I
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Multi Dial-		Down
	Multi Dial+		Up
	Enter		OK
	Function		Fav / Marker / PC
	Video Adjust		Picture / Format
	FL Dimmer		Mute / Dimmer
	Jog Mode 1		Left
	Jog Mode 2		Right

Originalfernbedienung Ersatzfernbedienung

























	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Previous		I<< / Preset-
	Next		>>I / Preset+
	REV		<< / Tune-
	FWD		>> / Tune+
	Return		Back / Return
	<   Step/Slow		CH- / Page-
	Step/Slow II >		CH+ / Page+
	Search Mode		Red / Netflix / Search
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5







**Originalfernbedienung Ersatzfernbedienung**

	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Program		TV/Radio /
	Last Memory		Vol+
	Condition Memory		Vol-

**Originalfernbedienung Ersatzfernbedienung**