




































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	>>/>>		>> / Tune+
	AD/Subt.		Audio / Lang I/II
	TTX/MIX		Text / Goto
	Samsung TV		TV/Radio /
	Settings		Setup / OPT /
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Exit		Exit / Cancel / Clear
	PRE-CH		Fav / Marker / PC
	Down		Down
	Vol+		Vol+
	CH List		Smart / List
	Ch+		CH+ / Page+
	Vol-		Vol-
	Ch-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9		9				
	Guide		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Return		Back / Return				
	Netflix		Shift + Red / Netflix /				
	video prime		Shift + Blue / Prime				

