






Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	Red/Program		Red / Netflix / Search
	Green/Marker		Green / APP / Repeat
	Yellow/Digest		Yellow / YouTube / Repeat
	Blue/Zoom		Blue / Prime Video / Random
	Shuffle		TV/Radio /
	Repeat		Shift + Green / APP /
	A/B		Shift + Yellow / YouTube /
	PIP		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+
	2nd Audio		Sound / Title
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Pop-Up Menu		Menu / Home
	Return		Back / Return
	On Screen		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	8
	9
	0
	Exit / Cancel / Clear
	+ Shift + Red / Netflix /
	Fav / Marker / PC
	+ Shift + Menu /
	Setup / OPT /
	Guide / EPG / -/--
	Subtitle / EQ
	Info / Angle
	Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

