 

 



































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide / EPG / -/--
	Recall		Shift + Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	FAV		Fav / Marker / PC
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Info		Info / Angle
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	TV		TV/Radio /




Originalfernbedienung Ersatzfernbedienung

	You Tube	 + 	Shift + Yellow / YouTube /
	Netflix	 + 	Shift + Red / Netflix /
	Smart		Smart / List
	Rec/DVD Menu		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Rec List/DVD		Setup / OPT /
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Yellow/Angle		Yellow / YouTube / Repeat
	Blue/Repeat		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

