



Originalfernbedienung Ersatzfernbedienung **Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Set Up		Setup / OPT /
	+		Up
	<		Left
	>		Right
	-		Down
	Cinema/Hi-Fi/User		1
	Cinema/Hi-Fi/User		2
	Cinema/Hi-Fi/User		3
	Night		Exit / Cancel / Clear

