

 


 









 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------|
|  | Power |  | Power |
|  | TV/Video |  | AV / Input / RDS |
|  | Counter Reset |  | Exit / Cancel / Clear |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Prog + |  | CH+ / Page+ |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Prog - |  | CH- / Page- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Display |  | Display / Media |
|  | 0 |  | 0 |
|  | Rec |  | Rec / Rec Mode |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------|
|  | Timer Rec |  | Sleep / Timer |
|  | Slow |  | Shift + Play / |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Stop |  | Stop / Hold |
|  | SP/LP |  | Sound / Title |
|  | A.Select |  | Audio / Lang I/II |





Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------------------|
| ON/STANDBY | Power |
| INPUT SELECT | RDS AV INPUT / AV / Input / RDS |
| 1 | TV 1 |
| 2 | DVD 2 |
| 3 | CD - STB 3 |
| CH/TRK PR+ | CH+ / Page+ |
| 4 | VIDEO 4 |
| 5 | TAPE 5 |
| 6 | TUNER 6 |
| CH/TRK PR- | CH- / Page- |
| 7 | AUX - HDD 7 |
| 8 | USB 8 |
| 9 | BLUETOOTH 9 |
| Vol+ | Vol+ |
| 0 | HDMI - BAT 0 |
| Vol- | Vol- |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

