


































Originalfernbedienung Ersatzfernbedienung
















 

On/Off		Power
Mute		Mute / Dimmer
Still		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tune-		<< / Tune-
Tune+		>> / Tune+
Tone-		I<< / Preset-
Tone+		>>I / Preset+
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Bright+ Mode		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Update		D.Menu / Top
Help		Setup / OPT /
Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

 
 

 
 
 

 
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Back		Exit / Cancel / Clear
Menu Down		Down
Swap		Back / Return
Volume+		Vol+
View		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1



Originalfernbedienung Ersatzfernbedienung

2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
On/Off		Shift + Power
Mix Scan		Shift + Text / Goto

Originalfernbedienung Ersatzfernbedienung

AV 2		Shift + AV / Input / RDS
Audio+		Shift + Vol+
Audio-		Shift + Vol-
Disp		Shift + Display / Media
On Pip		Shift + 1
Dim Pip		Shift + 2
Rotate Pip		Shift + 3
Search		Shift + Red / Netflix /

