

 

 

 







 



 





 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	Setup		Setup / OPT /
	N/P		Picture / Format
	DVD/DVB/Card		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	PBC		Smart / List
	Title		Sound / Title
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Search		Shift + Red / Netflix /
	Mark		Fav / Marker / PC
	Program		Shift + TV/Radio / Program
	Zoom		Zoom / Size
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	I <<		I << / Preset-
	>> I		>> I / Preset+
	Vol-		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle/Scan		Info / Angle
	Tv/Radio/A-B		TV/Radio /
	TTX/3D		Text / Goto
	Red/FAV/Step		Red / Netflix / Search
	Green/Del/Slow		Green / APP / Repeat
	Yellow/Pro/V-Mod		Yellow / YouTube / Repeat
	Blue/EPG/Repea		Blue / Prime Video / Random
A1		Shift + 1	1
A2		Shift + 2	2
A3		Shift + 3	3

Originalfernbedienung Ersatzfernbedienung

