





 



 







 


 

 







Originalfernbedienung Ersatzfernbedienung

	V.Off		Picture / Format
	On		Power
	STNBY		Shift + Power
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Subttl		Subtitle / EQ
	Open / Close		Eject / Surround
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Zoom+		CH+ / Page+
	Up		Up
	Zoom-		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Zoom On		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Setup		Setup / OPT /
	Quick		Smart / List
	Progress / Preset-		Shift + I<< / Preset-
	V.Remote /		Shift + >>I / Preset+
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	<I Slow		Shift + << /
	Pause / Step		Pause / Step / Freeze
	Slow I>		Shift + >> /
	Dimmer		Mute / Dimmer
	Display		Display / Media
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Random		Blue / Prime Video / Random
	Memory		Fav / Marker / PC
	Repeat		Green / APP / Repeat
	Still-		Vol-
	Still+		Vol+
	DNR		AV / Input / RDS
	A-B		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	Search		Red / Netflix / Search

