







































































**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	V.Format		Picture / Format
	USB Out		AV / Input / RDS
	Mute		Mute / Dimmer
	Find		Shift + Red / Netflix /
	SAT		Shift + 0
	SAT		Display / Media
	Page+		Shift + CH+ /
	Folder		D.Menu / Top
	Fav		Fav / Marker / PC
	Page-		Shift + CH- /
	Menu		Menu / Home
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Info		Info / Angle
	Left / Vol-		Left
	Left / Vol-		Vol-

**Originalfernbedienung    Ersatzfernbedienung**

	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Exit		Exit / Cancel / Clear
	Down / CH-		CH- / Page-
	Down / CH-		Down
	EDV		Smart / List
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	TV/Radio		TV/Radio /
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	White / Timer		Sleep / Timer
	Red / Audio		Audio / Lang I/II
	Red / Audio		Red / Netflix / Search
	Green / Option		Setup / OPT /
	Green / Option		Green / APP / Repeat
	Yellow / TXT		Text / Goto
	Yellow / TXT		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue / WebTV		Blue / Prime Video / Random

