



**Originalfernbedienung    Ersatzfernbedienung**

	Open / Close		Eject / Surround
	Power		Power
	TV Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Display		Shift + Display / Media
	Function+		CH+ / Page+
	Video Format		Shift + Picture / Format
	Movie / Music		Sound / Title
	Dynamic Bass		Shift + Sound / Title
	Function-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Enter		Fav / Marker / PC
	Picture Navi		Picture / Format
	Audio		Audio / Lang I/II
	Subtitle /		Subtitle / EQ
	Angle		Info / Angle
	DVD Top Menu		D.Menu / Top
	Up		Up
	DVD Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down



