




































Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Copy		TV/Radio /
	Info		Info / Angle
	Power Mode		Sleep / Timer
	Net Test		Smart / List
	Net Cast		Display / Media
	Slow		Shift + Play /
	<<		<< / Tune-
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Setup		Setup / OPT /
	Home		Shift + Menu / Home

Home

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Green / APP /
	Vol+		Vol+
	Mute		Mute / Dimmer
	Page+		CH+ / Page+
	Vol-		Vol-
	Page-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

SEARCH	Search	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
ROTATE	Rotate	GOTO TEXT	Text / Goto
BGM	BGM	TOP MENU D.MENU	D.Menu / Top
SUB.	Sub.	EQ SUBTITLE	Subtitle / EQ
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

