






























 









Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	Sleep		Sleep / Timer
	7		7
	8		8
	9		9
	AUX	 + 	Shift + 7
	10		0
	+10		Guide / EPG / -/--
	FM		Mute / Dimmer
	TUNER	 + 	Shift + 6
	Play Mode		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	CD	 + 	Shift + 3
	CD 1		D.Menu / Top
	CD 2		Setup / OPT /
	CD 3		Text / Goto
	TAPE	 + 	Shift + 5
	SA Bass		Subtitle / EQ
	Bass		Audio / Lang I/II
	Treble		Eject / Surround
	Cancel		Exit / Cancel / Clear
	Set		OK
	Tape Direction		Menu / Home
	Play / Up		Play / Slow
	Play / Up		Up
	Left		Left
	Vol+		Vol+
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Stop / Down		Stop / Hold
	Stop / Down		Down
	Fade Muting		Sound / Title

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	Sleep		Sleep / Timer
	7		7
	8		8
	9		9
	AUX		Shift + 7
	10		0
	+10		Guide / EPG / -/--
	FM		Mute / Dimmer
	TUNER		Shift + 6
	Play Mode		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	CD		Shift + 3
	CD 1		D.Menu / Top
	CD 2		Setup / OPT /
	CD 3		Text / Goto
	TAPE		Shift + 5
	SA Bass		Subtitle / EQ
	Bass		Audio / Lang I/II
	Treble		Eject / Surround
	Cancel		Exit / Cancel / Clear
	Set		OK
	Tape Direction		Menu / Home
	Play / Up		Play / Slow
	Play / Up		Up
	I<</<< / Left		<< / Tune-
	I<</<< / Left		Left
	I<</<< / Left		I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	>> >> / Right		Right
	>> >> / Right		>> / Preset+
	>> >> / Right		>> / Tune+
	Vol-		Vol-
	Stop / Down		Stop / Hold
	Stop / Down		Down
	Fade Muting		Sound / Title

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	Sleep		Sleep / Timer
	7		7
	8		8
	9		9
	AUX		Shift + 7
	10		0
	+10		Guide / EPG / --
	FM Mode/Mute		Mute / Dimmer
	TUNER		Shift + 6
	Play Mode		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	CD		Shift + 3
	Disc 1		D.Menu / Top
	Disc 2		Setup / OPT /
	Disc 3		Text / Goto
	TAPE		Shift + 5
	SA Bass		Subtitle / EQ
	Bass		Audio / Lang I/II
	Treble		Eject / Surround
	Cancel		Exit / Cancel / Clear
	Set		OK
	Tape Direction		Menu / Home
	Play		Play / Slow
	I<</<< / Left		<< / Tune-
	I<</<< / Left		Left
	I<</<< / Left		I<< / Preset-
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

Table mapping original remote buttons to replacement buttons. Original buttons include >>I/>>, Right, TUNE+, PRESET+, Vol-, REC MODE, Rec Pause, STEP-FREEZE, Stop, Fade Muting, and various audio controls like BASS, TREBLE, BALANCE, etc.

Originalfernbedienung Ersatzfernbedienung

Empty table for mapping original remote buttons to replacement buttons.

