









**Originalfernbedienung    Ersatzfernbedienung**

	On/Off		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play/Pause CD		Play / Slow
	Play/Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	I<< Skip/Search		I<< / Preset-
	Skip/Search >>I		>>I / Preset+
	< Play Tape		Left

**Originalfernbedienung    Ersatzfernbedienung**

	Play > Tape		Right
	Stop Tape		OK
	Pause Tape		Down
	<< Tape		<< / Tune-
	>> Tape		>> / Tune+
	Auto Rec Mute		Up
	Rec Tape		Rec / Rec Mode
	< Start Turntable		Menu / Home
	EQ On/Flat		Smart / List
	EQ On/Flat		Subtitle / EQ
	EQ Preset		Display / Media
	Stop Turntable		Exit / Cancel / Clear
	Muting/-20dB		Mute / Dimmer
	Volume Down		Vol-
	Volume Up		Vol+

