



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power Tv		Shift + Power
	CH+ Tv		Shift + CH+ /
	Volume+ Tv		Vol+
	Direct Tv Rec		Shift + TV/Radio / Program
	AV Tv		Shift + AV / Input / RDS
	CH- Tv		Shift + CH- /
	Volume- Tv		Vol-
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	ShowView		Zoom / Size
	Cancel		Exit / Cancel / Clear
	0		0
	Input Select		AV / Input / RDS
	Manual Skip		Shift + Display / Media
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Direct Navigator/Top		D.Menu / Top
	Up		Up
	Functions		Setup / OPT /



