

 













 



 

 

 

 











 







Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Back/Random		Back / Return
	I<</<</Preset		I<< / Preset-
	Preset Up/>>/>>I		>>I / Preset+
	Memory/Set		Menu / Home
	Tuning-		<< / Tune-
	Tuning+		>> / Tune+
	Clear		Exit / Cancel / Clear
	Timer Set		D.Menu / Top
	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	Timer Down		Down
	Timer Up		Up
	Function		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Band		TV/Radio /
	X-Bass/Equalizer		Audio / Lang I/II
	Vol-		Vol-
	Vol+		Vol+



Tools