 








 



 

 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Video Adjust		Smart / List
	Setup		Setup / OPT /
	Menu		Menu / Home
	Display		Display / Media
	Top Menu		D.Menu / Top
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down







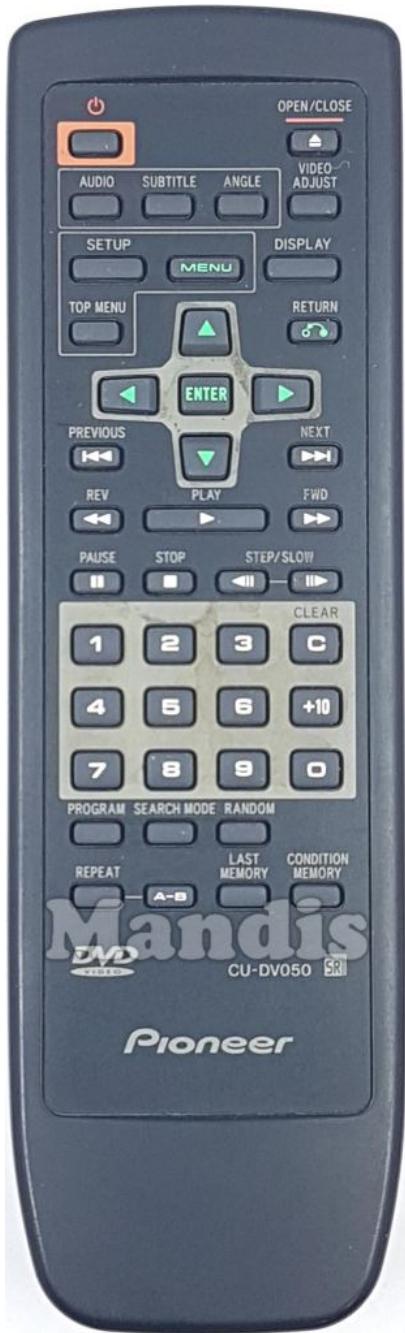

 

 



 





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<II Step/Slow		CH- / Page-
	Step/Slow II>		CH+ / Page+
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/-
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Program		TV/Radio /
	Search Mode		Red / Netflix / Search
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Last Memory		Picture / Format
	Condition Memory		Fav / Marker / PC
	A-B		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

