







 









 

























Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Pro. List		Smart / List
	0		0
	Last		Back / Return
	Info		Info / Angle
	[≡?]/Reveal		Play / Slow
	Up		Up



Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	[≡i]/Index		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/--
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	I/II		Audio / Lang I/II
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung **Ersatzfernbedienung**

	Text		Text / Goto
	[/=]/Mix		Rec / Rec Mode
	[≡ B]/Subtitle		Subtitle / EQ
	* / Freeze		Pause / Step / Freeze
	[< >] / Aspect		Setup / OPT /
	Sleep		Sleep / Timer
	♥ / FAV		Fav / Marker / PC

Originalfernbedienung **Ersatzfernbedienung**

