 













 


 





 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Prog		TV/Radio /
	1		1
	2		2
	3		3
	V-Mode		Picture / Format
	4		4
	5		5
	6		6
	A-Mode		Sound / Title
	7		7
	8		8
	9		9
	Setup		Setup / OPT /
	Goto		Text / Goto
	10+		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	0/10		0
	Title		Shift + Sound / Title
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Step		Shift + Pause / Step /
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>		>> / Preset+
	Vol+		Vol+
	Key+		CH+ / Page+
	Virtual		Shift + Display / Media
	OSD		Display / Media
	Vol-		Vol-
	Key-		CH- / Page-
	Nothing		Shift + Setup / OPT / Tools
	Zoom		Zoom / Size
	Mute		Mute / Dimmer
	L/R/ST		Smart / List
	Tone		Exit / Cancel / Clear
	S.Effect		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

