


















Originalfernbedienung Ersatzfernbedienung

POWER	Power		Power
DISPLAY	Display		Display / Media
OPEN/CLOSE	Open/Close		Eject / Surround
LANGUAGE	Language		Audio / Lang I/II
ANGLE	Angle		Info / Angle
SUBTITLE	Subtitle		Subtitle / EQ
PROG	Prog		TV/Radio /
MUTE	Mute		Mute / Dimmer
PDVD	PDVD		AV / Input / RDS
TIME	Time		Sleep / Timer
ZOOM	Zoom		Zoom / Size
A-B	A-B		Yellow / YouTube / Repeat
1	1		1
2	2		2
3	3		3
REPEAT	Repeat		Green / APP / Repeat
4	4		4

Originalfernbedienung Ersatzfernbedienung

5	5		5
6	6		6
STEP	Step		Shift + Pause / Step /
7	7		7
8	8		8
9	9		9
RESUME	Resume		Smart / List
10+	10+		Guide / EPG / -/-
0/10	0/10		0
CLEAR	Clear		Exit / Cancel / Clear
ECHO-	Echo-		CH- / Page-
ECHO+	Echo+		CH+ / Page+
VOLUME-	Volume-		Vol-
VOLUME+	Volume+		Vol+
MENU/VIEW	Menu/View		Menu / Home
UP	Up		Up
TITLE	Title		Sound / Title



