



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Text		Text / Goto
	△		Setup / OPT /
	Help		Zoom / Size
	Rec		Rec / Rec Mode
	D.Menu / Top		D.Menu / Top
	Stop		Stop / Hold
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Back		Back / Return
	0		0
	Enter		Fav / Marker / PC
	Vol+		Vol+
	Language		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Guide		Guide / EPG / -/-
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Digital TV		Smart / List
	Movie		Picture / Format
	Radio		TV/Radio /
	Media		Display / Media

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Text		Text / Goto
	△		Setup / OPT /
	Help		Zoom / Size
	Rec		Rec / Rec Mode
	○		D.Menu / Top
	Stop		Stop / Hold
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Back		Back / Return
	0		0
	Enter		Fav / Marker / PC
	Vol+		Vol+
	Language		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Guide		Guide / EPG / -/-
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Digital TV		Smart / List
	Movie		Picture / Format
	Radio		TV/Radio /
	Media		Display / Media

Originalfernbedienung Ersatzfernbedienung

