 





Originalfernbedienung Ersatzfernbedienung

	Eco		D.Menu / Top
	Power		Power
	Surround		Eject / Surround
	Stereo		Audio / Lang I/II
	Target		Menu / Home
	Beam		Smart / List
	HDMI 1		1
	HDMI 2		2
	HDMI 3		3
	TV		4
	Optical		5
	Bluetooth		9
	AUX 1		7
	AUX2		8
	Clear Voice		Exit / Cancel / Clear
	System Memory		Guide / EPG / -/--
	System Memory		0

Originalfernbedienung Ersatzfernbedienung

	System Memory		Fav / Marker / PC
	Sub+		CH+ / Page+
	CH Level		Display / Media
	Vol+		Vol+
	Sub-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Setup		Setup / OPT /
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Info		Info / Angle
	Movie		Red / Netflix / Search



