

 

 

 



 





 

 












 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Auto / Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Back		Back / Return
	Vol+		Vol+
	Title		Shift + Sound / Title
	Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	LCD Menu		Menu / Home
	Down		Down
	DVD Setup / Exit		Setup / OPT /
	DVD Setup / Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow




 

 










**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop / Hold
	Slow / Step		Shift + Play /
	Slow / Step		Shift + Pause / Step /
	Audio / Nicam		Audio / Lang I/II
	Text / <<		Text / Goto
	Text / <<<		<<< / Tune-
	>> / Mix		>> / Tune+
	Hold / Goto		Shift + Text /
	Hold / Goto		Shift + Stop /
	Subpage /		Info / Angle
	I<< / Index		I<< / Preset-
	>>I / Size		Shift + Zoom /
	>>I / Size		>>I / Preset+
	Reveal / Zoom		Zoom / Size
	Picture / Subtitle		Shift + Picture / Format
	Picture / Subtitle		Subtitle / EQ
	Red / Program		Red / Netflix / Search























 

 

 

 

 

 

**Originalfernbedienung Ersatzfernbedienung**

	Red / Program		TV/Radio /
	Green / Intro		Green / APP / Repeat
	Yellow / Repeat		Yellow / YouTube / Repeat
	Yellow / Repeat		Shift + Green / APP /
	Blue / A-B		Blue / Prime Video / Random
	Blue / A-B		Shift + Yellow / YouTube /
































**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto















 











 







**Originalfernbedienung Ersatzfernbedienung**

	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Auto		Fav / Marker / PC
	Red/Program		Red / Netflix / Search
	Green/Intro		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
Hold	 + 	Shift + Stop /	
Title	 + 	Shift + Sound / Title	
Nicam	 + 	Shift + Audio / Lang I/II	

Originalfernbedienung Ersatzfernbedienung

Aspect	 + 	Shift + Picture / Format
D.Subt.	 + 	Shift + Zoom /
Goto	 + 	Shift + Text /
Angle	 + 	Shift + Info / Angle
Slow/PgUp	 + 	Shift + CH+ /
D.Disp	 + 	Shift + Display / Media
Step/PgDn	 + 	Shift + CH- /

