













 









 





 













 
 


 

 

 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	[ = ] .		Subtitle / EQ
	*1		Picture / Format
	Text		Text / Goto
	Google Play		Shift + Green / APP / APP / REPEAT
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	V+		Vol+
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	[G]		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime

Originalfernbedienung Ersatzfernbedienung