



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Select Drive		Smart / List
	AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page Up		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page Down		CH- / Page-
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	ShowView		Picture / Format
	Delete/*		Zoom / Size
	0		0
	Input Select		AV / Input / RDS
	Prog/Check		TV/Radio /
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play/x1.3		Play / Slow
	i/Status		Info / Angle
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Direct Navigator	D.Menu / Top	Audio	Audio / Lang I/II
Left/<II	Left	STTL	Subtitle / EQ
Up	Up	Display	Display / Media
OK	OK	Time Slip	Sleep / Timer
Right/ II>	Right		
Function Menu	Menu / Home		
Option	Setup / OPT /		
Down	Down		
Return	Back / Return		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow/Create Chapter	Yellow / YouTube / Repeat		
Blue/Manual Skip	Blue / Prime Video / Random		
Rec	Rec / Rec Mode		
Rec Mode	Shift + Rec / Rec Mode		
EXT Link	Eject / Surround		
Direct Tv Rec	Text / Goto		

