



Originalfernbedienung Ersatzfernbedienung

	Time/Level-		Down
	Time/Level+		Up
	Delay/Center/Rear/SWFR		OK
	Test		Text / Goto
	Effect On/Off		Guide / EPG / -/-
	< Program		Left
	Program >		Right
	Prologic		Audio / Lang I/II
	Enhanced		Setup / OPT /
	V-AUX		7
	VCR		4
	Tv/DBS		1
	DVD/LD		2
	2CH/6CH		8
	Dir A		Smart / List
	Dir B		Display / Media
	Rec/Pause Tape		Shift + Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Play Tape		Shift + Play /
	<< Tape		Shift + << /
	>> Tape		Shift + >> /
	Stop Tape		Shift + Stop /
	A/B		Yellow / YouTube / Repeat
	Tape		5
	Preset-		Shift + I<< / Preset-
	Preset+		Shift + >>I / Preset+
	A/B/C/D/E		Fav / Marker / PC
	Tuner		6
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	Disc		AV / Input / RDS
	Play CD		Play / Slow
	CD		3
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

	Stop/Pause CD		Stop / Hold
	Phono		9
	Sleep		Sleep / Timer
	Power		Power
	Volume-		Vol-
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung



Mandis

Mandis