
 

 





 



 























 

 

 
 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	< Prev		I<< / Preset-
	0		0
	Next>		>>I / Preset+
	Help		D.Menu / Top
	Timer		Sleep / Timer
	Menu		Menu / Home
	Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	TV		Display / Media
	TV		AV / Input / RDS
	Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	PVR		Smart / List
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

