





 

 

 
 
 

 
 
 

 





 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source Direct		AV / Input / RDS
	AUX		7
	Tuner		6
	Phono		2
	CD		3
	TAPE-2		Shift + 5
	TAPE-1		5
	VCR-2		Shift + 4
	VCR-1		4
	< Preset Tuner		<< / Tune-
	< Preset Tuner		Shift + I<< / Preset-
	Preset > Tuner		>> / Tune+
	Preset > Tuner		Shift + >>I / Preset+
	< Deck A		Left
	> Deck A		Right
	< Deck B		Shift + Left

Originalfernbedienung Ersatzfernbedienung

	> Deck B		Shift + Right
	Rec/Pause Deck A		Rec / Rec Mode
	Stop Deck A		OK
	Rec/Pause Deck B		Shift + Rec / Rec Mode
	Stop Deck B		Shift + OK
	<< Deck A		Down
	>> Deck A		Up
	<< Deck B		Shift + Down
	>> Deck B		Shift + Up
	Pause CD		Pause / Step / Freeze
	Play CD		Play / Slow
	Audio Muting		Mute / Dimmer
	Stop CD		Stop / Hold
	Volume Up		Vol+
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Volume Down		Vol-

