









 







































Originalfernbedienung Ersatzfernbedienung

Power		Power
Picture		Picture / Format
AV input		AV / Input / RDS
Input Tv		TV/Radio /
Menu		Menu / Home
Text		Text / Goto
STTL		Subtitle / EQ
APPS		Display / Media
i		Info / Angle
X/Exit		Exit / Cancel / Clear
Home		Shift + Menu /
Guide		Guide / EPG / -/--
Netflix		Shift + Red / Netflix /
Option		Setup / OPT /
Return/Back		Back / Return
Up		Up
Down		Down

Originalfernbedienung Ersatzfernbedienung

Right		Right
Left		Left
OK		OK
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Mute		Mute / Dimmer
Vol+		Vol+
Vol-		Vol-
CH+		CH+ / Page+
CH-		CH- / Page-
1		1
2		2
3		3
4		4
5		5



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
6			6
7			7
8			8
9			9
0			0
Last View	 Fav / Marker / PC		
?/eHelp	 Audio / Lang I/II		
My APP	 +  Shift + Green / APP /		
<<	 << / Tune-		
Play	 Play / Slow		
>>	 >> / Tune+		
I<<	 I<< / Preset-		
Pause	 Pause / Step / Freeze		
>>I	 >>I / Preset+		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		

