











 





 

 

























 























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Display |  | Display / Media |
|  | Eject |  | Eject / Surround |
|  | On / Standby |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | CH+ |  | CH+ / Page+ |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | CH- |  | CH- / Page- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TRK+ |  | Vol+ |
|  | I.Select |  | Smart / List |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------|
|  | Count.Rst. |  | Back / Return |
|  | TRK- |  | Vol- |
|  | F.Adv |  | >>I / Preset+ |
|  | Index- |  | Down |
|  | Index+ |  | Up |
|  | Count/TR |  | Text / Goto |
|  | Annul. |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | ENR. |  | Rec / Rec Mode |
|  | Timer |  | Sleep / Timer |
|  | Play |  | Play / Slow |
|  | << Rew |  | << / Tune- |
|  | >> FF |  | >> / Tune+ |
|  | I> Slow |  | Shift + Play / |
|  | Stop |  | Stop / Hold |
|  | Pause / Still |  | Pause / Step / Freeze |
|  | SP/LP |  | Picture / Format |



