




 
 































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/VCR		TV/Radio /
	DVD		Shift + 2
	CH/Page+		CH+ / Page+
	1		1
	2		2
	3		3
	CH/Page-		CH- / Page-
	4		4
	5		5
	6		6
	Vol+		Vol+
	7		7
	8		8
	9		9
	Vol-		Vol-
	O/AV		0

Originalfernbedienung Ersatzfernbedienung

	O/AV		AV / Input / RDS
	Display		Info / Angle
	Setup / Menu		Setup / OPT /
	Setup / Menu		Menu / Home
	Up / Green		Up
	Up / Green		Green / APP / Repeat
	Mute		Mute / Dimmer
	Left / Red		Left
	Left / Red		Red / Netflix / Search
	Enter/Text/Mix/TV		OK
	Enter/Text/Mix/TV		Text / Goto
	Right / Blue		Right
	Right / Blue		Blue / Prime Video / Random
	DVD Menu		D.Menu / Top
	Down / Yellow		Down
	Down / Yellow		Yellow / YouTube / Repeat
	Cancel / F/T/B		Exit / Cancel / Clear



