


 







 

 



 














 






**Originalfernbedienung    Ersatzfernbedienung**

	TV		TV/Radio /
	TV	 +  Shift +	1
	VT		Text / Goto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	-/-		Guide / EPG / -/-
	Red		Red / Netflix / Search

**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	><		Pause / Step / Freeze
	Dis		Display / Media
	00:00		Rec / Rec Mode
	VT-		Down
	VT+		Up
	A		D.Menu / Top
	P-		CH- / Page-
	P+		CH+ / Page+
	⌂		Back / Return
	Vol-		Vol-
	Vol+		Vol+
	[=+]		Stop / Hold
	[=>]		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	?		Play / Slow
	[>=]		<< / Tune-
	F-		Left
	F+		Right
	[-]		Info / Angle
	[◆]		Zoom / Size
	→		Smart / List
	C		Exit / Cancel / Clear
	M		Menu / Home
	Lock		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung