


 















 


















 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DEV		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Edit		Guide / EPG / -/--
	0		0
	A		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Info		Info / Angle
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	VOIP/MON		Display / Media
	Prev		Fav / Marker / PC
	Up		Up
	>>		>> / Tune+
	Left		Left
	I<<		I<< / Preset-
	Enter/Play/Pause		OK
	Right		Right
	>>I		>>I / Preset+
	PTZ		Back / Return
	Down		Down
	<<		<< / Tune-
	ESC		Exit / Cancel / Clear
	<II		Pause / Step / Freeze
	Stop		Stop / Hold
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Iris+		Shift + Up
	Focus+		Shift + CH+ /
	Zoom+		CH+ / Page+
	F1		Green / APP / Repeat
	Iris-		Shift + Down
	Focus-		Shift + CH- /
	Zoom-		CH- / Page-
	F2		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

