



Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	Amazon		Blue / Prime Video / Random
	Netflix		Red / Netflix / Search
	iHeart Radio		Setup / OPT /
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	>>		>> / Tune+
	CC		Subtitle / EQ
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	V		Display / Media
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	[]		Zoom / Size
	PIC		Picture / Format
	Recall		Fav / Marker / PC
	1		1
	2		2
	3		3





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Enter		Smart / List				
	0		0				
	--		Text / Goto				

