



 

 

 

 

 

 

 

 

 

 












 





 

















Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	EPG		Guide / EPG / -/-
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	i		Info / Angle
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /





**Originalfernbedienung    Ersatzfernbedienung**

	Roll		Smart / List
	Prog		Shift + TV/Radio / Program
	Digest		Display / Media
	Device		Picture / Format
	Rec		Rec / Rec Mode
	Zoom		Zoom / Size
	Stop		Stop / Hold
	Prev		<< / Preset-
	Next		>>  / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+

**Originalfernbedienung    Ersatzfernbedienung**