


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Timer		Sleep / Timer
	Sub TV		TV/Radio /
	Preview		Smart / List
	Snap		Display / Media
	Shut Down		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↑		Guide / EPG / -/--

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	←		Left
	Mute		Mute / Dimmer
	Stereo		Audio / Lang I/II
	Source		AV / Input / RDS
	Zoom		Zoom / Size
	Min		Back / Return
	Up		Up
	Down		Down
	Left		Shift + Left
	Right		Right
	Enter		OK
	Timeshift		Picture / Format
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow





**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause / Step / Freeze
	Stop		Shift + Stop /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
FUN1	Fun1		Red / Netflix / Search
FUN2	Fun2		Green / APP / Repeat
FUN3	Fun3		Yellow / YouTube / Repeat
FUN4	Fun4		Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**