



 

 

 

 

 
 
 

 



 

 

 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--/X/Prefe		Guide / EPG / -/--
	0		0
	→/Salir/AV		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Guia		Shift + Guide / EPG / -/--
	Piloto		Display / Media
	Serv		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E		Setup / OPT /
	Mute		Mute / Dimmer
	+/Info		Info / Angle
	Perso		Text / Goto
	Tv/Sat		TV/Radio /

 





 





 
 
 
 
 
 
 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--/X/Prefe		Guide / EPG / -/--
	0		0
	->/Salir/AV		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	ZAP+		CH+ / Page+
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol-		Vol-
	Down		Down
	ZAP-		CH- / Page-
	Menu		Menu / Home
	Guia		Shift + Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E		Setup / OPT /
	Mute		Mute / Dimmer

