

 

 

 



 



 

 

 



 

 



 

 



 

 

 





 













 
 
 

 

 



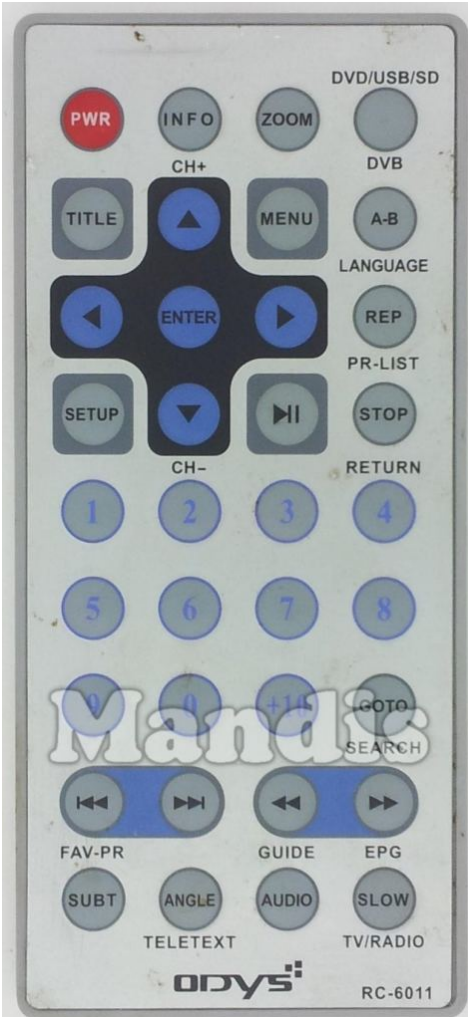 


Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Info / Angle
	 Zoom / Size
	 Smart / List
	 Shift + Sound / Title
	 Up
	 CH+ / Page+
	 Menu / Home
	 Audio / Lang I/II
	 Left
	 OK
	 Right
	 Display / Media
	 Setup / OPT /
	 CH- / Page-
	 Down
	 Play / Slow

Originalfernbedienung	Ersatzfernbedienung
	 Pause / Step / Freeze
	 Stop / Hold
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/-
	 Red / Netflix / Search
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-





**Originalfernbedienung    Ersatzfernbedienung**

	>>/EPG		>> / Tune+
	SUB-T		Subtitle / EQ
	Angle/Teletext		Text / Goto
	Audio		Sound / Title
	Slow/Tv/Radio		TV/Radio /

**Originalfernbedienung    Ersatzfernbedienung**