







































































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	-/-- TV		Guide / EPG / -/--
	TV		TV/Radio /
	DVD		Smart / List
	Open/Close		Eject / Surround
	Mute		Mute / Dimmer
	Display		Display / Media
	PP		Back / Return
	TV/AV		AV / Input / RDS
	1		1
	1 TV		Shift + 1
	2		2
	2 TV		Shift + 2
	3		3
	3 TV		Shift + 3
	4		4
	4 TV		Shift + 4

Originalfernbedienung Ersatzfernbedienung

	5		5
	5 TV		Shift + 5
	6		6
	6 TV		Shift + 6
	7		7
	7 TV		Shift + 7
	8		8
	8 TV		Shift + 8
	9		Shift + 9
	9 TV		9
	0 TV		Shift + 0
	0		0
	-/--		Shift + Guide / EPG / -/--
	+10		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Setup		Setup / OPT /
	Menu DVD		Menu / Home





Originalfernbedienung Ersatzfernbedienung

	Menu Tv		D.Menu / Top
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung


	Repeat A-B		Yellow / YouTube / Repeat
	Program		Shift + TV/Radio / Program
	Slow		Shift + Play /
	Search		Red / Netflix / Search
	Zoom		Zoom / Size
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	PAL/NTSC		Picture / Format
	?		Shift + Info / Angle
	◆		Shift + Setup / OPT / Tools
	+		Shift + Zoom /
	[><]		Shift + Subtitle / EQ
	Timer		Sleep / Timer
	X		Shift + Exit / Cancel / Clear
	[ / = ]		Shift + Text /

Goto





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	[≡] GOTO TEXT Text / Goto

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

