



Originalfernbedienung Ersatzfernbedienung

DVD/USB	DVD/USB	SHIFT + MEDIA DISPLAY	Shift + Display / Media
MENU/PBC	Menu/PBC	HOME MENU	Menu / Home
DISPLAY	Display	MEDIA DISPLAY	Display / Media
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
P/N	P/N	GUIDE EPG	Guide / EPG / -/--
L/R	L/R	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
ANGLE	Angle	ANGLE INFO	Info / Angle
LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
TITLE	Title	TITLE SOUND	Sound / Title
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7

Originalfernbedienung Ersatzfernbedienung

8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
Up	Up	Up	Up
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
Enter	Enter	OK	OK
Play	Play	SLOW	Play / Slow
Slow	Slow	SHIFT + SLOW	Shift + Play /
Vol-	Vol-	VOL -	Vol-
Stop	Stop	HOLD	Stop / Hold
Vol+	Vol+	+ VOL	Vol+
<<	<<	TUNE- <<	<< / Tune-
>>	>>	TUNE+ >>	>> / Tune+
I<<	I<<	PRESET- I<<	I<< / Preset-



