 

 

 

 

 

 

 

 

 

 











 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Sleep		Sleep / Timer
	CD		Shift + 3
	MD/CD-R		Shift + 5
	DVD		Shift + 2
	D-TV/CBL		Shift + 1
	TUNER		Shift + 6
	Multi CH In		Shift + 0
	V-AUX / Dock		Shift + 7
	DVR		Shift + 4
	NET		Shift + 9
	USB		Shift + 8
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer
	Stereo		1

Originalfernbedienung Ersatzfernbedienung

	Music		2
	Entertain		3
	Movie		4
	Standard		5
	Select		6
	Extd Sur.		7
	Direct ST		8
	Speakers		9
	Enhancer		Guide / EPG / -/-
	Night		0
	Straight		Fav / Marker / PC
	Level		Sound / Title
	Up / Preset/CH +		Up
	Set Menu		Menu / Home
	Left/-		Left
	Enter		OK
	Right/+		Right





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	+	Shift + Power
	Sleep		Sleep / Timer
	CD	+ 3	Shift + 3
	MD/CD-R	+ 5	Shift + 5
	DVD	+ 2	Shift + 2
	DTV/CBL	+ 1	Shift + 1
	Tuner	+ 6	Shift + 6
	Multi CH In	+ 0	Shift + 0
	V-AUX / Dock	+ 7	Shift + 7
	DVR	+ 4	Shift + 4
	USB	+ 8	Shift + 8
	NET	+ 9	Shift + 9
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Fav / Marker / PC
	Band		Sound / Title
	Up / Preset+		Up
	Up / Preset+		>> / Preset+
	Srch Mode		Menu / Home
	Left / A/B/C/D/E-		Left
	Enter		OK
	Right /		Right



A/B/C/D/E+

